


GUIDELINE FOR MEASURING STAIRS WITH LANDING OR WITH ANGLE STEPS

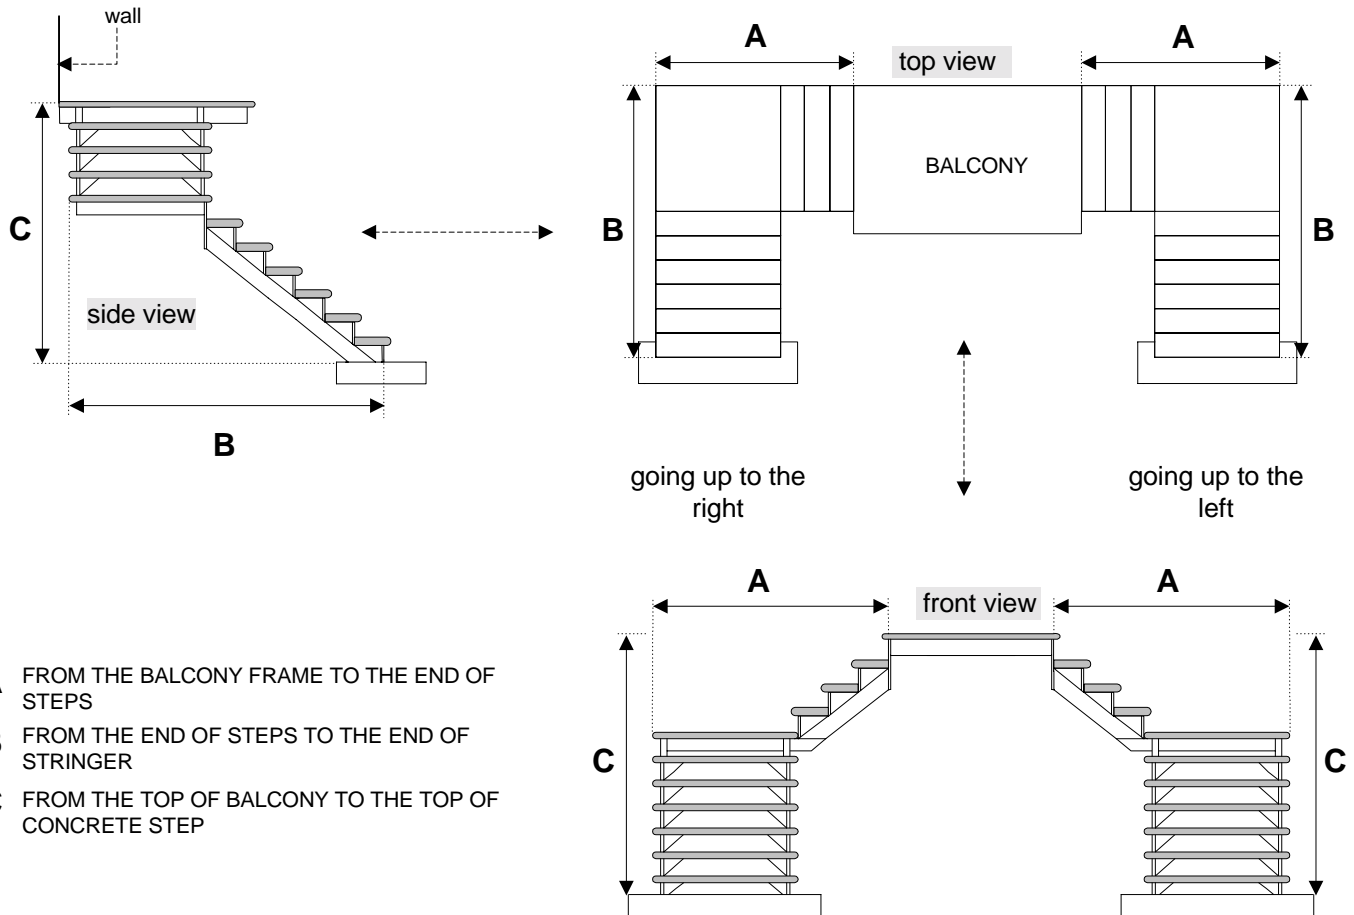

GUIDELINE FOR MEASURING STRAIGHT STAIRS

- A** FROM THE TOP OF BALCONY TO THE TOP OF CONCRETE STEP
- B** FROM THE BALCONY FRAME TO THE END OF STRINGER

